




AA-BASE Automation Appliance

Instructions for Using New DST Transition Dates

The AA-BASE firmware is designed to transition in and out of DST automatically based on the pre-2007 scheme of DST beginning on the first Sunday in April and ending on the last Sunday in October. Since these are no longer the correct dates, it will be necessary for you to disable the automatic transition feature in your clock and manually change the system time twice each year. Follow the link for information on making this change.

Procedure to disable the automatic DST transition:


From the Home page, click on *Setup*, then click on *Time and Date*

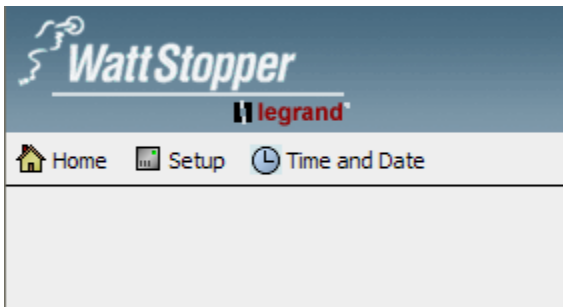

Use the pull down to select the appropriate time zone without DST. These are:

Eastern	SystemV/EST5 (-5)
Central	SystemV/CST6 (-6)
Mountain	SystemV/MST7 (-7)
Pacific	SystemV/PST8 (-8)
Alaska	SystemV/YST9 (-9)

The example below is for Eastern time zone without DST.

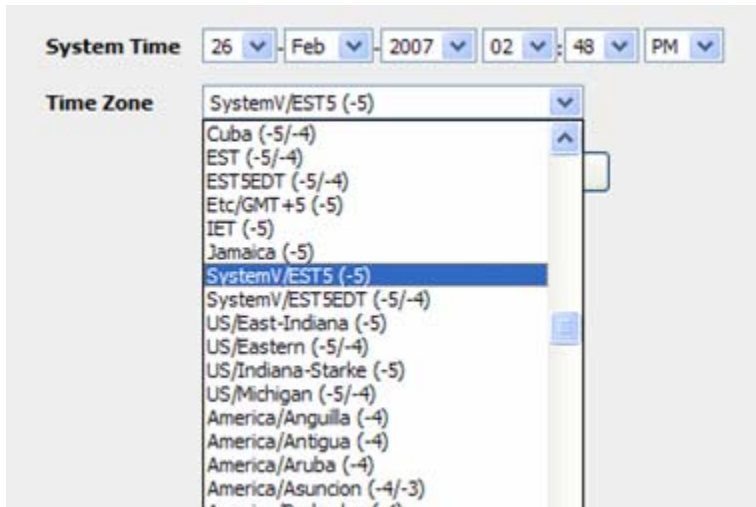

Once the AA-BASE has been configured to **not** transition to and from DST on the old dates, it will be necessary to manually re-set the system clock like you do at home. Set the clock back one hour on or just before the second Sunday in March (March 11, 2007) and ahead one hour on or just before the first Sunday in November (November 4, 2007).

Procedure to reset the system clock:

Follow the above procedure to reach the *Time and Date* page

Use the pull down to select the new hour.

Click the *Save* button to save the change.

